



12 packets per case

NEW Ovention® Oven Cleaner

- Safe for all oven components
- Packaged for efficient shipping and storage
- Easy to order and use

Six Box Bundle includes:

- 6 bottles and 72 powder packets (1-year supply*)
- Twice the amount of cleaner for the same price as our previous formula!
- One free month of additional oven warranty**

*Monthly supply based on average use.

**Additional month warranty included when bundle is ordered with a new oven.



Learn more!



OVENTION
A **HATCO** COMPANY

(855) 298-OVEN (6836) | connect@ventionovens.com | www.ventionovens.com

Conveyor Cleaning Instructions



1 With oven running, stand by the exiting belt. Push a damp scrub brush back forth over the hot belt. Use cleaning solution* as needed. DO NOT splash cavity, fans, filters or controls.



2 Turn off the oven with the rocker switch. When the oven is cool, the screens will read 'READY TO CLEAN'.



3 Open the oven door and remove top and bottom jet plates.



4 Remove crumb trays and end stops on both wings. Wipe down or wash as needed (dishwasher safe).



5 Place the dirty jet plates into a sink with hot water and soap. Spray* as needed and scrub and/or run through dishwasher.



6 Remove the **two** air filters from the back side of the oven, one per side.




7 Using hot water and soap, gently rinse all air filters. Allow them to air dry completely before reinstallation.



8 Spray rag with cleaner* and wipe debris out of the cavity. Clean the inside of the door. NEVER spray directly into the oven.



9 Replace each of the two jet plates, two air filters, two crumb trays and two end stops.

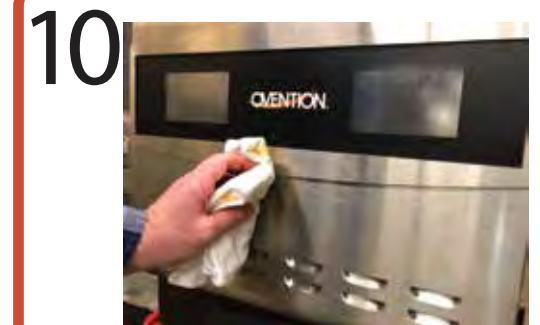

10 Polish and clean the exterior of the oven with a commercial-grade stainless steel polish.

* Use ONLY a non-caustic degreaser on the oven and components. Noncompliance will void the oven warranty. Pictures above are representative/may vary.


Call Ovention Customer Care at 855.298.6836

**Frequency and depth of cleaning is dependent on the type of use your machine is subjected to. Refer to your product manual (available on our website) for additional cleaning options.



F1400 Cleaning Instructions

1

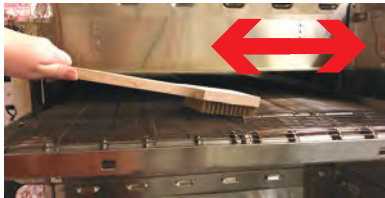


With oven running, stand by the exiting belt. Push a damp scrub brush back forth over the hot belt. Use cleaning solution* as needed. DO NOT splash cavity, fans, or controls.

2



Turn off the oven with the rocker switch and wait for the oven to cool.

3

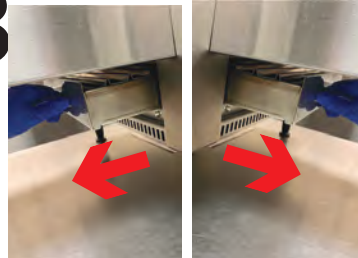


Remove two cavity crumb trays; one on each side of the oven.

4



Spray and wipe down crumb trays. As needed, place dirty crumb trays into sink with hot water and soap. Spray* and scrub as needed and/or run through dishwasher.

5

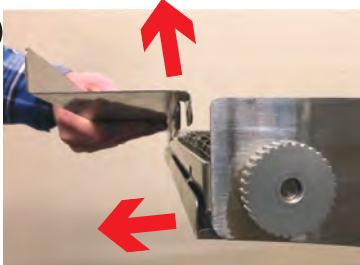


Remove the conveyor belt crumbtrays and endstops. Wipe down or wash as needed.

6



Spray* rag and wipe debris out of cavity.

7

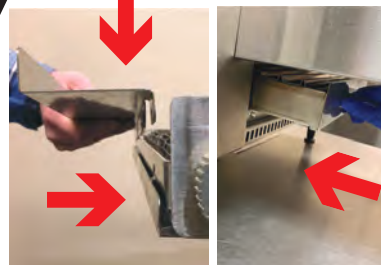

Replace (2) cavity crumb trays under belt. Replace (2) conveyor crumb trays so tray sits on ledge and hooks into place. Align tabs on end stops and reinstall (2) end stops.

8



Clean and polish the exterior of the oven with a commercial-grade stainless steel polish.

**Frequency and depth of cleaning is dependent on the type of use your machine is subjected to. Refer to your product manual (see our website) for additional cleaning options.

**Call Ovention Customer Care
at 855.298.6836**

* Use ONLY a non-caustic degreaser on the oven and components. Non-compliance will void oven warranty. Pictures are representative/ may vary.



Matchbox® 360 Cleaning Instructions



1



Turn off the oven with the rocker switch. When the oven is cool, the screens will read 'READY TO CLEAN'.

2



Remove cooking racks from either side of the assembly. You may rotate it manually.

3



Open the oven door and remove four (4) jet plates: two on top and two on the bottom.

4



Wipe down each side of the assembly and under cooking racks with stainless steel cleaner. NEVER spray directly at LCD screens.

5



Spray rag with cleaner* and wipe out the cavity. Clean the inside of the door. NEVER spray directly into the oven.

6



Remove the **three** air filters. Two from the back side of the oven, and one from underneath the control screen.

7



Use hot water and soap to gently rinse all air filters. Allow them to completely air dry before reinstallation.

8



Place the dirty jet plates into a sink with hot water and soap. Spray* as needed and scrub and/or run through dishwasher.

9



Replace the air filters, racks, and jet plates. Insert the plates from the side and reach in through the front of the oven to guide them into place.

10



Spray rag with cleaner* and wipe down the inside of the door.

* Use ONLY a non-caustic degreaser on the oven and components. Noncompliance will void the oven warranty. Pictures above are representative/may vary.

**Frequency and depth of cleaning is dependent on the type of use your machine is subjected to. Refer to your product manual (available at Oventionovens.com) for additional cleaning options.

Call Ovention Customer Care at 855.298.6836

Matchbox® Cleaning Instructions

1



Turn off the oven with the rocker switch. When the oven is cool, the screens will read 'READY TO CLEAN'.

2



Using a non-caustic degreaser*, spray the inside of the front door and wipe clean.

3



Open the oven door and remove top and bottom jet plates.

4




Remove crumb trays and racks on both wings. Wipe down or wash as needed (dishwasher safe).

5



Spray rag with cleaner* and wipe debris out of the cavity. NEVER spray directly into the oven.

6

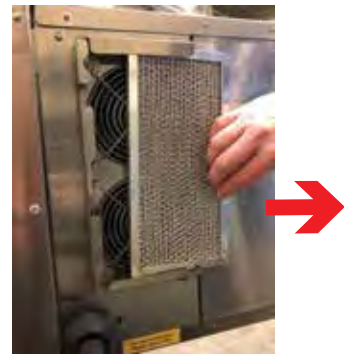

Remove the **two** air filters from the back side of the oven, one per side.

7



Using hot water and soap, gently rinse all air filters. Allow them to air dry completely before reinstallation.

8



Place the dirty jet plates into a sink with hot water and soap. Spray* as needed and scrub and/or run through dishwasher.

9



Replace each of the two jet plates, two air filters, two crumb trays and racks.

10




Polish and clean the exterior of the oven with a commercial-grade stainless steel polish.

* Use ONLY a non-caustic degreaser on the oven and components. Noncompliance will void the oven warranty. Pictures above are representative/may vary.

Call Ovention Customer Care at 855.298.6836

**Frequency and depth of cleaning is dependent on the type of use your machine is subjected to. Refer to your product manual (available on our website) for additional cleaning options.

1

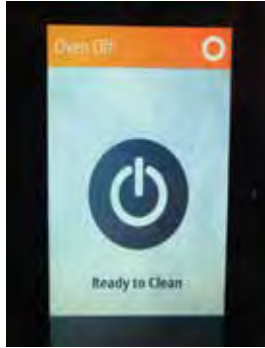

Turn off oven by touching the power symbol. Wait for the cooling fans to shut off, and for the screen to display "Ready To Clean"

2



Move the control reset switch to off. Flip the GFCI switch (or 2 switches, depending on the oven) to off (which is green).

3



Open the door. Remove rack, wipe down with damp* non-abrasive cloth. Wipe all interior surfaces of oven cavity, including door. DO NOT SPRAY INTO CAVITY.

4



Raise the element pack on the bottom of the oven, and remove the crumb tray from beneath. Set the crumb tray aside. You do not need to do anything with the top.

5



Use a damp cloth to clean underneath the jet pack. Follow with a dry cloth, and allow to air dry completely.

6



Remove and clean the drip tray. Lift up the tray, tilting the bottom outwards to release the tabs. Spray and wipe down as needed.

7




Remove all three (3) air filters, Spray with water/soap to clean. Set aside and allow to air dry completely before reinstalling.

8



Scrub/ soak drip tray, cooking racks, crumb tray as needed. Rinse and allow to air dry completely before reinstalling.

9

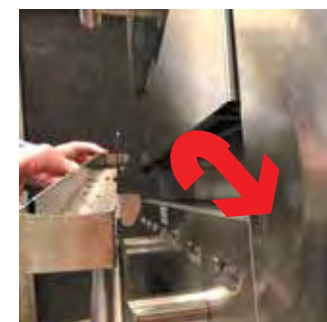

Reinstall drip tray, crumb tray, cooking racks.

10



Polish and clean the exterior of the oven with a commercial-grade stainless steel polish.


* Use ONLY a non-caustic degreaser on the oven and components. Noncompliance will void oven warranty. Pictures are representative/ may vary.

Call Ovention Customer Care at 855.298.6836

**Frequency and depth of cleaning is dependent on the type of use your machine is subjected to. Refer to your product manual (available on our website) for additional cleaning options.

OVENTION[®] MiSA[™] Cleaning Instructions

1

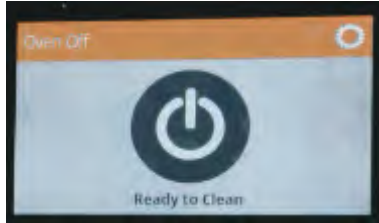

Turn off oven by touching the power symbol.
Wait for cooling fans to shut off, and for the screen to display "Ready To Clean."

2



Open the door. Remove cook plate and wipe down with damp* non-abrasive cloth.

3



Wipe all interior surfaces of oven cavity, including door. **DO NOT SPRAY INTO CAVITY.** Wipe oven chamber using a dry, non-abrasive cloth.

4




Wipe down exterior of oven using a damp cloth. Polish all metal surfaces with quality stainless cleaner.

5



Reinstall cook plate by sliding into position on the floor of the oven cavity.

6

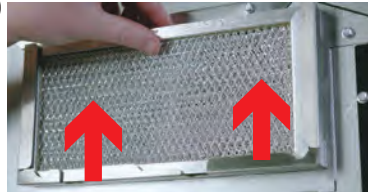

Remove air filter on the back of oven. Slide straight up to remove from brackets.

7



Spray the filter with water or soak in soapy water.

8



Allow filter to air-dry **completely** before reinstalling.

**Frequency and depth of cleaning is dependent on the type of use your machine is subjected to. Refer to your product manual (see our website) for additional cleaning options.

**Call Ovention Customer Care
at 855.298.6836**

* Use **ONLY** a non-caustic degreaser on the oven and components. Non-compliance will void oven warranty. Pictures are representative/ may vary.

Shuttle® Cleaning Instructions



1 With oven running, stand by the exiting belt. Push a damp scrub brush back forth over the hot belt. Use cleaning solution* as needed. DO NOT splash cavity, fans, filters or controls.



2 Turn off the oven with the rocker switch. When the oven is cool, the screens will read 'READY TO CLEAN'.



3 Open the door and remove both jet plates. On each side of the oven, remove crumb trays and end stops. Wipe down or wash all as needed (dishwasher safe).



4 Underneath each wing closest to the back of the oven, pull the pin straight down, then remove c-bracket from cradle, releasing the door.



5 On the right side of the oven, lift the drive belt cover and remove. Remove the belt by pulling the belt away from the oven while rotating the pulley.



6 Lift door at a 45° angle, and guide it until separate from the oven, and pull it straight away from the cavity.




7 Remove the **both** air filters from the back of the oven, one per side. Using hot water and soap, gently rinse all air filters. Allow them to air dry completely before reinstallation.



8 Spray rag with cleaner* and wipe debris out of the cavity. Clean the inside of the door. NEVER spray directly into the oven.



9 Replace each of the two jet plates, two air filters, two crumb trays, two doors, two end stops, and drive belt cover.

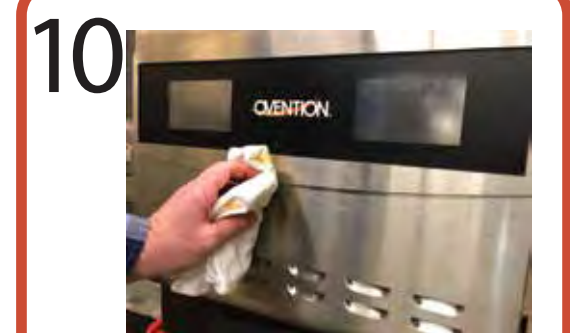

10 Polish and clean the exterior of the oven with a commercial-grade stainless steel polish.

* Use ONLY a non-caustic degreaser on the oven and components. Noncompliance will void the oven warranty. Pictures above are representative/may vary.

Call Ovention Customer Care at 855.298.6836

**Frequency and depth of cleaning is dependent on the type of use your machine is subjected to. Refer to your product manual (available on our website) for additional cleaning options.