

Conveyor Cleaning Instructions



1 With oven running, stand by the exiting belt. Push a damp scrub brush back forth over the hot belt. Use cleaning solution* as needed. **DO NOT** splash cavity, fans, filters or controls.



2 Turn off the oven with the rocker switch. When the oven is cool, the screens will read 'READY TO CLEAN'.




3 Open the oven door and remove top and bottom jet plates.



4 Remove crumb trays and end stops on both wings. Wipe down or wash as needed (dishwasher safe).



5 Place the dirty jet plates into a sink with hot water and soap. Spray* as needed and scrub and/or run through dishwasher.

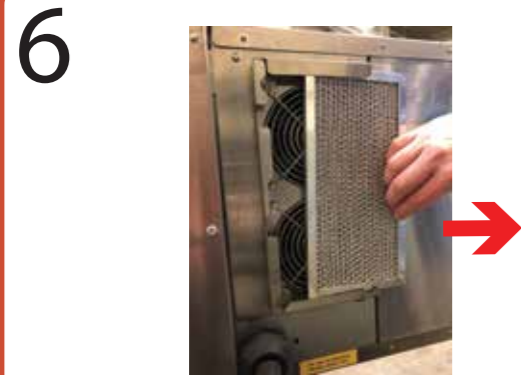


6 Remove the **two** air filters from the back side of the oven, one per side.



7 Using hot water and soap, gently rinse all air filters. Allow them to air dry completely before reinstallation.



8 Spray rag with cleaner* and wipe debris out of the cavity. Clean the inside of the door. **NEVER** spray directly into the oven.

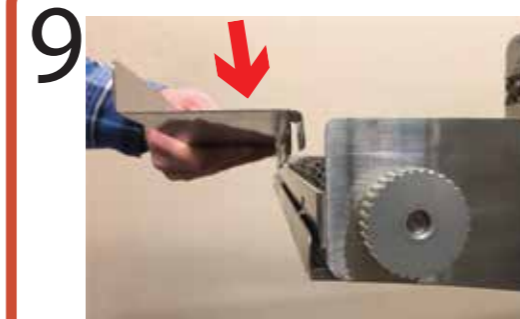

9 Replace each of the two jet plates, two air filters, two crumb trays and two end stops.



10 Polish and clean the exterior of the oven with a commercial-grade stainless steel polish.

* Use **ONLY** a non-caustic degreaser on the oven and components. Noncompliance will void the oven warranty. Pictures above are representative/may vary.

Call Ovention Customer Care at 855.298.6836

**Frequency and depth of cleaning is dependent on the type of use your machine is subjected to. Refer to your product manual (available on our website) for additional cleaning options.