

Matchbox® 360 Cleaning Instructions



1 Turn off the oven with the rocker switch. When the oven is cool, the screens will read 'READY TO CLEAN'.



2 Remove cooking racks from either side of the assembly. You may rotate it manually.



3 Open the oven door and remove four (4) jet plates: two on top and two on the bottom.



4 Wipe down each side of the assembly and under cooking racks with stainless steel cleaner. NEVER spray directly at LCD screens.



5 Spray rag with cleaner* and wipe out the cavity. Clean the inside of the door. NEVER spray directly into the oven.



6 Remove the **three** air filters. Two from the back side of the oven, and one from underneath the control screen.




7 Use hot water and soap to gently rinse all air filters. Allow them to completely air dry before reinstallation.



8 Place the dirty jet plates into a sink with hot water and soap. Spray* as needed and scrub and/or run through dishwasher.



9 Replace the air filters, racks, and jet plates. Insert the plates from the side and reach in through the front of the oven to guide them into place.

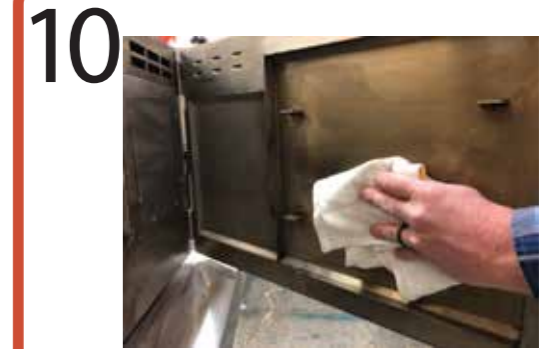

10 Spray rag with cleaner* and wipe down the inside of the door.

* Use ONLY a non-caustic degreaser on the oven and components. Noncompliance will void the oven warranty. Pictures above are representative/may vary.

**Frequency and depth of cleaning is dependent on the type of use your machine is subjected to. Refer to your product manual (available at Oventionovens.com) for additional cleaning options.

Call Ovention Customer Care at 855.298.6836