

Matchbox® Cleaning Instructions

1



Turn off the oven with the rocker switch. When the oven is cool, the screens will read 'READY TO CLEAN'.

2



Using a non-caustic degreaser*, spray the inside of the front door and wipe clean.

3



Open the oven door and remove top and bottom jet plates.

4




Remove crumb trays and racks on both wings. Wipe down or wash as needed (dishwasher safe).

5



Spray rag with cleaner* and wipe debris out of the cavity. NEVER spray directly into the oven.

6

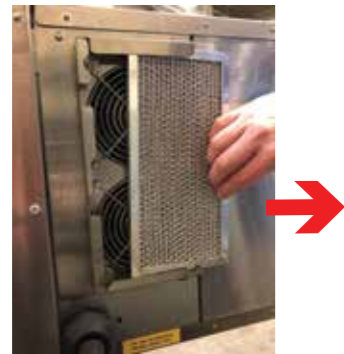

Remove the **two** air filters from the back side of the oven, one per side.

7



Using hot water and soap, gently rinse all air filters. Allow them to air dry completely before reinstallation.

8



Place the dirty jet plates into a sink with hot water and soap. Spray* as needed and scrub and/or run through dishwasher.

9



Replace each of the two jet plates, two air filters, two crumb trays and racks.

10



Polish and clean the exterior of the oven with a commercial-grade stainless steel polish.

* Use ONLY a non-caustic degreaser on the oven and components. Noncompliance will void the oven warranty. Pictures above are representative/may vary.

Call Ovention Customer Care at 855.298.6836

**Frequency and depth of cleaning is dependent on the type of use your machine is subjected to. Refer to your product manual (available on our website) for additional cleaning options.