 


OVENTION[®] MiSA[™] Cleaning Instructions

1

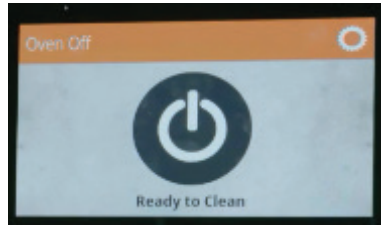

Turn off oven by touching the power symbol. Wait for cooling fans to shut off, and for the screen to display "Ready To Clean."

2



Open the door. Remove cook plate and wipe down with damp* non-abrasive cloth.

3



 
Wipe all interior surfaces of oven cavity, including door. DO NOT SPRAY INTO CAVITY. Wipe oven chamber using a dry, non-abrasive cloth.

4




Wipe down exterior of oven using a damp cloth. Polish all metal surfaces with quality stainless cleaner.

5

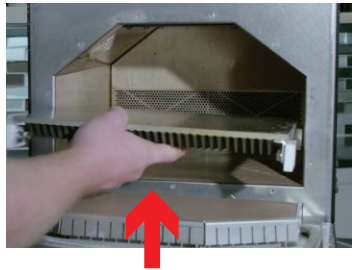

Reinstall cook plate by sliding into position on the floor of the oven cavity.

 6

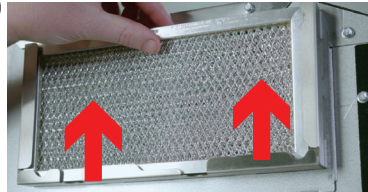


Remove air filter on the back of oven. Slide straight up to remove from brackets.

7



Spray the filter with water or soak in soapy water.

 8

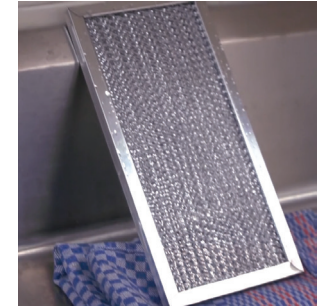

Allow filter to air-dry **completely** before reinstalling.

**Frequency and depth of cleaning is dependent on the type of use your machine is subjected to. Refer to your product manual (see our website) for additional cleaning options.

**Call Ovention Customer Care
at 855.298.6836**

* Use ONLY a non-caustic degreaser on the oven and components. Non-compliance will void oven warranty. Pictures are representative/ may vary.