

Shuttle® Cleaning Instructions




1 With oven running, stand by the exiting belt. Push a damp scrub brush back forth over the hot belt. Use cleaning solution* as needed. DO NOT splash cavity, fans, filters or controls.



2 Turn off the oven with the rocker switch. When the oven is cool, the screens will read 'READY TO CLEAN'.



3 Open the door and remove both jet plates. On each side of the oven, remove crumb trays and end stops. Wipe down or wash all as needed (dishwasher safe).

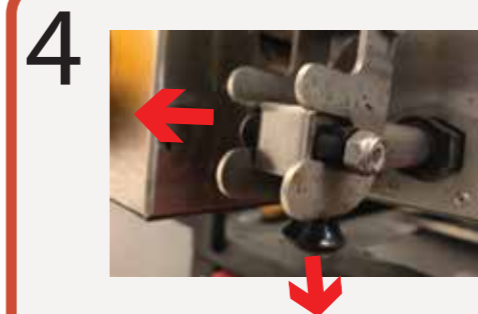

4 Underneath each wing closest to the back of the oven, pull the pin straight down, then remove c-bracket from cradle, releasing the door.




5 On the right side of the oven, lift the drive belt cover and remove. Remove the belt by pulling the belt away from the oven while rotating the pulley.




6 Lift door at a 45° angle, and guide it until separate from the oven, and pull it straight away from the cavity.




7 Remove the **both** air filters from the back of the oven, one per side. Using hot water and soap, gently rinse all air filters. Allow them to air dry completely before reinstallation.

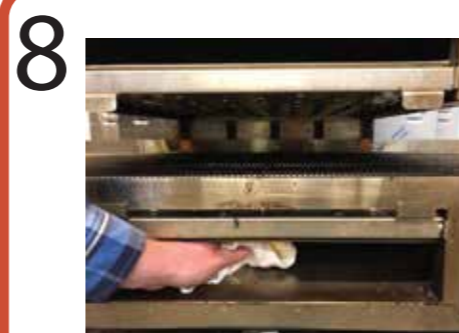

8 Spray rag with cleaner* and wipe debris out of the cavity. Clean the inside of the door. NEVER spray directly into the oven.

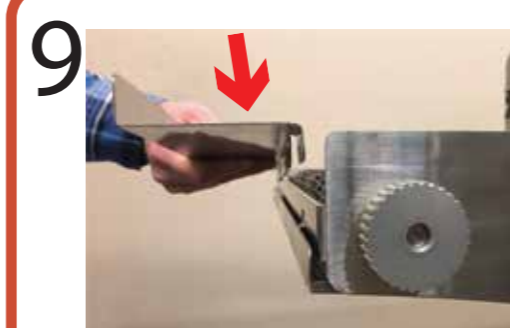

9 Replace each of the two jet plates, two air filters, two crumb trays, two doors, two end stops, and drive belt cover.

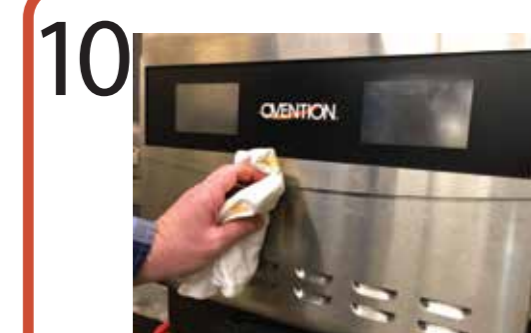

10 Polish and clean the exterior of the oven with a commercial-grade stainless steel polish.

* Use ONLY a non-caustic degreaser on the oven and components. Noncompliance will void the oven warranty. Pictures above are representative/may vary.

Call Ovention Customer Care at 855.298.6836

**Frequency and depth of cleaning is dependent on the type of use your machine is subjected to. Refer to your product manual (available on our website) for additional cleaning options.