 




F1400 Cleaning Instructions

1

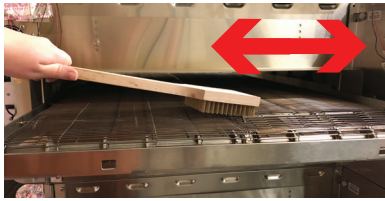

 
With oven running, stand by the exiting belt. Push a damp scrub brush back forth over the hot belt. Use cleaning solution* as needed. DO NOT splash cavity, fans, or controls.

2



Turn off the oven with the rocker switch and wait for the oven to cool.

3

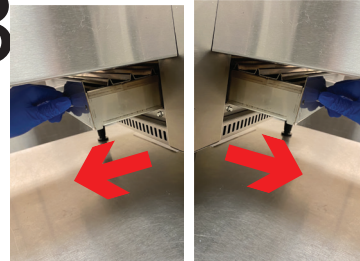


Remove two cavity crumb trays; one on each side of the oven.

4



Spray and wipe down crumb trays. As needed, place dirty crumb trays into sink with hot water and soap. Spray* and scrub as needed and/or run through dishwasher.

 5

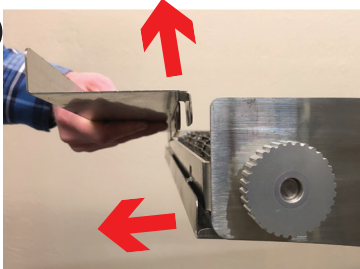


Remove the conveyor belt crumbtrays and endstops. Wipe down or wash as needed.

6



Spray* rag and wipe debris out of cavity.

 7

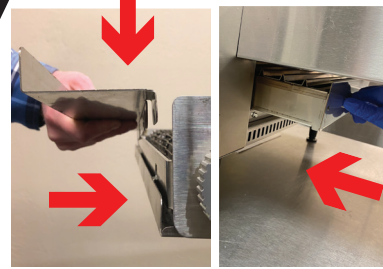

Replace (2) cavity crumb trays under belt. Replace (2) conveyor crumb trays so tray sits on ledge and hooks into place. Align tabs on end stops and reinstall (2) end stops.

8



Clean and polish the exterior of the oven with a commercial-grade stainless steel polish.

**Frequency and depth of cleaning is dependent on the type of use your machine is subjected to. Refer to your product manual (see our website) for additional cleaning options.

**Call Ovention Customer Care
at 855.298.6836**

* Use ONLY a non-caustic degreaser on the oven and components. Non-compliance will void oven warranty. Pictures are representative/ may vary.